

# Cisco ATA's

SPA 112 and 122

## Admin Guide





## Find the IP Address

### Quick Steps

1. Lift the handset of the phone connected to your ATA, Dial \*\*\*\* to initiate the IVR Menu
2. Wait to be instructed to enter your command.
3. Dial 110# and the IP address will be played to you

## How To Set The Configuration

### Quick Steps

1. Find the IP Address of the ATA device (above) and open a web browser to the IP address of the device.
2. Login with your ATA device user password.

A screenshot of a web browser login dialog box. The background is light gray. At the top, it says "The server 10.4.0.168:80 requires a username and password. The server says: spa user". Below this, there are two input fields. The first is labeled "User Name:" and contains the text "user". The second is labeled "Password:" and contains six black dots. At the bottom right, there are two buttons: a pink "Cancel" button and a blue "Log In" button.

The server 10.4.0.168:80 requires a username and password. The server says: spa user

User Name:

Password:

## Quick Setup

Go to the Quick Setup and enter Line 1 details (from your SETUP document provided by VoIP Much):


Proxy = (SIP Address from document)

User ID = (Device Username from document)

Password = (Device Password from document)

Dial Plan =

(\*xx.|\*\*xx|[23456789]11|0|00|[2-9]xx[2-9]xxxxxxS0|1[2-9]xx[2-9]xxxxxxS0|011[2-9]xxxxxx.)

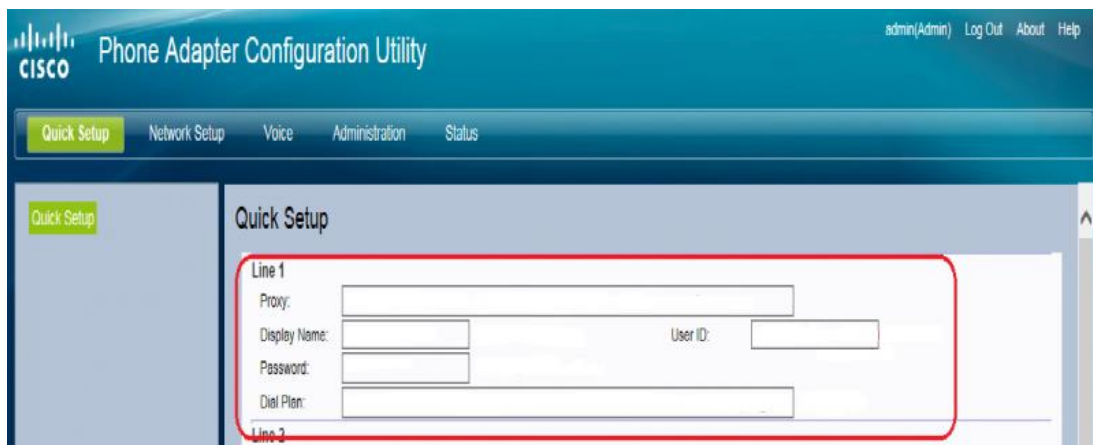

The screenshot shows the Cisco Phone Adapter Configuration Utility interface. The top navigation bar includes 'Quick Setup', 'Network Setup', 'Voice', 'Administration', and 'Status'. The 'Quick Setup' section is active, displaying a form for 'Line 1' configuration. The form fields are: Proxy, Display Name, Password, and Dial Plan. A red box highlights the 'Line 1' section, which includes the 'Proxy' field and the 'Display Name' and 'User ID' fields.

Click Submit to save.



## Configuring the Voice Line

Click on Voice (from top menu), then Line 1 (from left menu).  
The following items should be set:

### General

Line Enable = Yes

### NAT Settings

NAT Mapping Enable = Yes

NAT Keep Alive Enable = Yes

### SIP Settings

SIP Port = 5060 (default)

### Proxy and Registration

Proxy = (SIP Address from VoIP Much SETUP document)

Register Expires = 1800

Proxy Fallback Intvl = 900

Use DNS SRV = No

DNS SRV Auto Prefix = No

### Subscriber Information

User ID = (Device Username from SETUP document)

Password = (Device Password from SETUP document)

User Auth ID = No

### Dial Plan

Dial Plan =

(\*xx.|\*\*xx|[23456789]11|0|00|[2-9]xx[2-9]xxxxxxS0|1[2-9]xx[2-9]xxxxxxS0|011[2-9]xxxxxx.)

Click Submit to save.



## **Reset to Factory Defaults**

### Quick Steps

1. Lift the handset of the phone connected to your ATA, Dial \*\*\*\* to initiate the IVR Menu
2. Wait to be instructed to enter your command.
3. Dial 73738 and Press 1 to confirm when prompted.